


ASSEMBLY INSTRUCTION


WATER FILL- & EMPTYING DEVICE




Filling the driving wheels

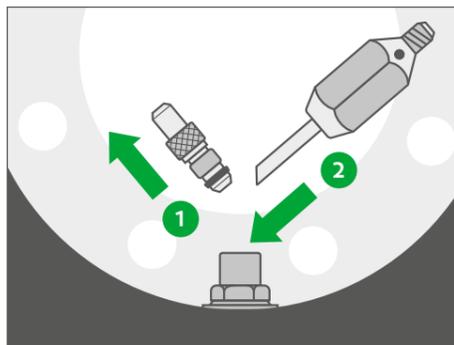


- Jack up the driving wheel.
- Unscrew valve core housing 1 from the rim valve.
- Allow compressed air to escape.
- Unscrew water filling valve 2.

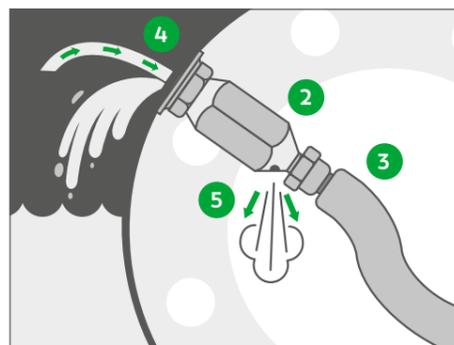

- Set driving wheel to position 2.
- Connect water hose 3 and fill with water.
- Air escapes from the tires through the tube 4 and the opening 5.
- The tire is starting filled with water when the water flows from the opening 5.

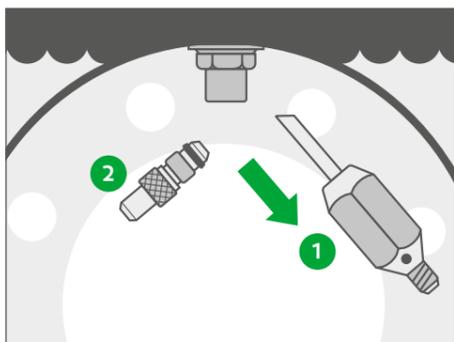


- Set driving wheel to position 3.
- Unscrew water filling valve 2.
- Screw in valve core housing 1.

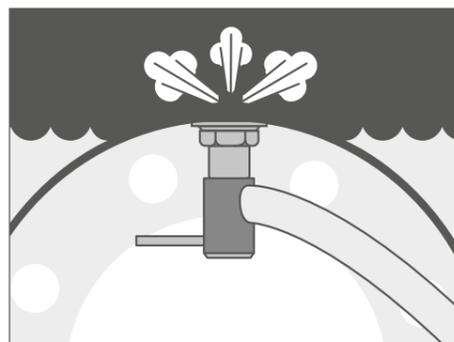


- Fill tires with compressed air according to instructions.
- Store water filling valve in a safe place.


Emptying the driving wheels

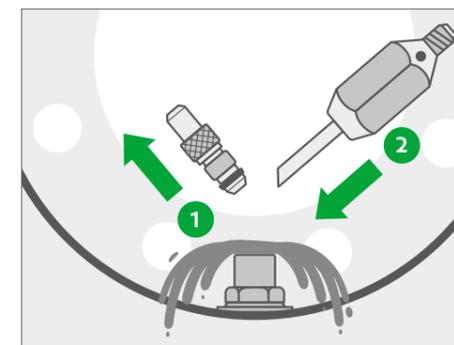


- Jack up the driving wheel.
- Unscrew valve core housing 1 from the rim valve.
- Drain water.
- Unscrew water filling valve 2.

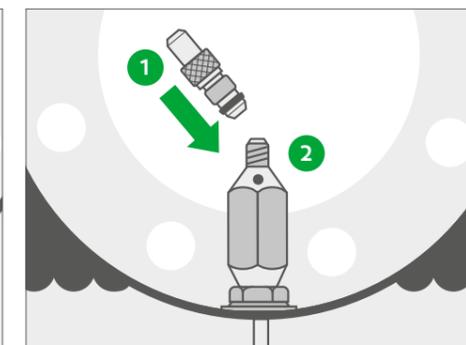

- Screw valve core housing 1 into water filling valve 1.

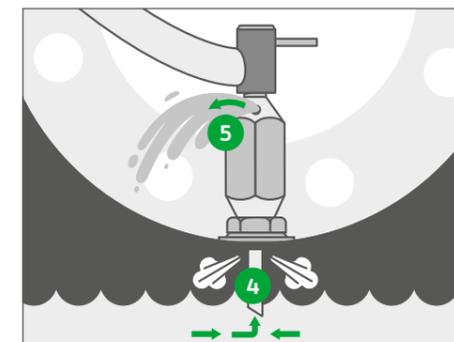

- Fill with compressed air.
- Air from tires escapes through tube 4 and opening 5.

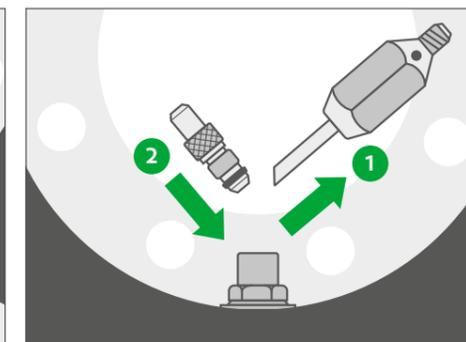

- Unscrew water filling valve 2.
- Screw in valve core housing 1.
- Fill tires with compressed air according to instructions.
- Store water filling valve in a safe place.