



since
1920
valves
with reliability


ALLIGATOR

ALLIGATOR Truck Tire Pressure Gauge Set RPS

Instruction for use

The **ALLIGATOR Double Seal Valve Cap V2B** allows tire pressure to be checked and tires to be inflated **without removing the valve cap**:

- ✓ Time saving
- ✓ No dirty fingers

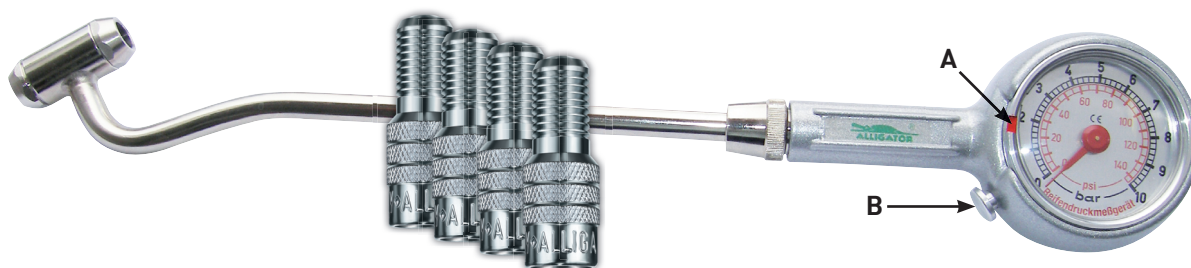

Instructions for use:

- 1 Remove and dispose of the old valve cap.
Screw on new **ALLIGATOR Double Seal Valve Cap V2B**.
- 2 Press the release button (B) and check whether the needle is pointing to zero on the dial; if necessary, turn the dial by using the red notch (A) to align the indicator needle with zero.
- 3 Hold the Tire Pressure Gauge in the right hand so that your index finger is on the release button (B).
- 4 Press the release button as far as it will go and fit the connection on to the tire valve so that no air can escape.
- 5 When the connection is completely airtight, let go of the release button and then disconnect the gauge from the tire valve.
- 6 Read off the pressure indicated.
- 7 Press release button: indicator needle returns to zero.
FINISHED.

The exact tire pressure can be determined in seconds with the **ALLIGATOR Truck Tire Pressure Gauge Set RPS**.

**The ALLIGATOR
Truck Tire Pressure
Gauge Set RPS
(Artikel-No. 149986)
consists of:**

1 Truck Tire Pressure Gauge
Art. No. 149989
(to re-order)

50 Double Seal Valve Caps V2B
Art. No. 330701
(to re-order)

Every ALLIGATOR tire pressure gauge is set and tested in the factory using precision calibration equipment.
In this way we achieve maximum accuracy and quality.

Max. tolerance $\pm 1\%$ of the final reading (according to EN 837 – 1/6).

Measuring range up to 10 bar (142 psi / 10hPa).



ALLIGATOR Ventilfabrik GmbH
Richard-Steiff-Straße 4 | 89537 Giengen/Brenz

Fon: +49 (0) 73 22 · 130 · 1
Fax: +49 (0) 73 22 · 130 · 359

info@alligator-ventilfabrik.de
www.alligator-ventilfabrik.de