



since 1920 valves with reliability



# ALLIGATOR CVV EASY –

A valve especially for commercial vehicles and mobile homes



## Assembly:

- 1 Clean the rim flange and the area around the valve hole thoroughly. Check the valve hole area for damage.
- 2 Before mounting, lubricate the valve with **mounting paste** or a similarly suitable lubricant.

In particular cases with unfavourable valve hole geometry, it might be necessary to turn the valve slightly for achieving a proper seat of the valve.



- 3 With little effort, push the valve in by hand. Or - **carefully** pull in the valve, using a standard mounting tool. The valve must be pulled in – in an **axial direction** to the valve hole – do not tilt it.
- 4 Make sure the valve is sitting tightly in the rim.

**An overview of the advantages:**

- ✓ Simple to **mount by hand**
- ✓ Reliable sealing in the rim
- ✓ Easily **removed – without special tools**
- ✓ No rim damage during disassembly
- ✓ High pressure capacity
- ✓ Fits almost every rim

## Disassembly:



- 1 To disassemble, crack the patented thrust washer with pliers or a screwdriver, and remove.
- 2 Now the valve can be simply pulled out through the valve hole, using the ALLIGATOR standard mounting tool.

**No special tools necessary!  
No damage to rims!**



ALLIGATOR Ventulfabrik GmbH  
Richard-Steiff-Straße 4 | 89537 Giengen/Brenz

Fon: +49 (0) 73 22 · 130 · 1  
Fax: +49 (0) 73 22 · 130 · 359

info@alligator-ventulfabrik.de  
www.alligator-ventulfabrik.de

